

Spring-loaded arm and linear equilization shaft encoder holder



WDGMA3003x
**Spring-loaded arm for encoder WDG
36A**

for length determination

[Details](#)



WDGMA3103x
**Spring-loaded arm for encoder WDG
36A**

for length determination

[Details](#)



WDGMA5005x
**Spring-loaded arm for encoder WDG
58B, 58D, 58K, WDG 58T**

for length determination

[STEP download WDGMA5xxx_01](#)

[STEP download WDGMA5xxx_02](#)

[Details](#)



WDGMA5105x
**Spring-loaded arm for encoder WDG
58B, 58D, 58K, WDG 58T**

for length determination

[STEP download WDGMA51052_01](#)

[STEP download WDGMA51052_02](#)

[STEP download WDGMA51052_03](#)

[Details](#)



WDGMA10000
**Spring-loaded arm for encoder WDG
58B, 58D, 58K, WDG 58T**


for length determination

[STEP download WDGMA10000_A](#)

[STEP download WDGMA10000_B](#)

[STEP download WDGMA10000_C](#)

[Details](#)

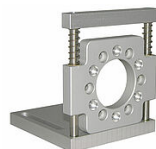

WDGDH10000
**Linear equilization shaft encoder holder
for encoder WDG 58B, 58D, 58K, WDG
58T**

for length determination

[→ STEP download WGDH10000.stp](#)

[Details](#)